

It displays the measured temperature, press SET key, the display temperature flashing, press "+" "-" to set the desired temperature. After finished, press SET to confirm and back.

Long-time press SET ket 5 seconds,then enter main setting menu,press + – key to change P0 to P8.Long-time press SET key or no any press 10seconds,automatically confirm and return.

Code	Indicating	Set range	Initial Setting
P0	Mode set(Heating or Cooling)	C/H	C
P1	Set return difference	0.1-15	2
P2	Up limit	110	110
P3	Down limit	-50	-50
P4	Temp. Adjust	-0.7-7°C	0
P5	Delay start time	0-10 minutes	0
P6	High temp.alarm	0-110°C	off
At "OFF" state, Long press + -,start and then recovery to initial set			